




WestwoodOne

XDS Pro Receiver Netcue Relay Pinouts

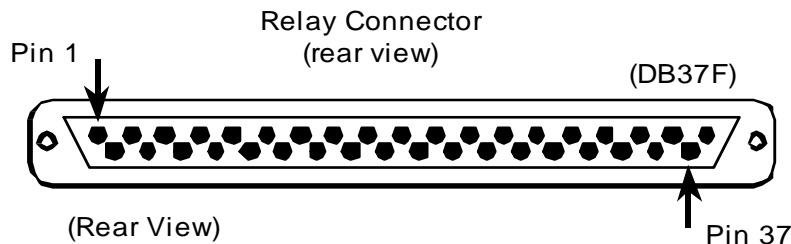

Relay 01	-----	Pins 1 & 20
Relay 02	-----	Pins 2 & 21
Relay 03	-----	Pins 3 & 22
Relay 04	-----	Pins 4 & 23
Relay 05	-----	Pins 6 & 25
Relay 06	-----	Pins 7 & 26
Relay 07	-----	Pins 8 & 27
Relay 08	-----	Pins 9 & 28
Relay 09	-----	Pins 11 & 29
Relay 10	-----	Pins 12 & 30
Relay 11	-----	Pins 13 & 31
Relay 12	-----	Pins 14 & 32
Relay 13	-----	Pins 16 & 34
Relay 14	-----	Pins 17 & 35
Relay 15	-----	Pins 18 & 36
Relay 16	-----	Pins 19 & 37

IMPORTANT: DO NOT connect your automation device to PINS 5, 10, 15, 24 or 33. PINS 5, 10 and 24 are receiver chassis grounds. PINS 15 and 33 are serial connections for the Netcue data stream that were used with the SA-compatible ABC Netcue II boxes during the transition to the DB-37 Netcue Card. Your relays will not function properly if you wire to these pins.